



Pos. Nr.	Artikel Nr.	Beschreibung
1	5562C-01	Schraube
2	5562C-02	Führungshülse
3	5562C-03	Luftabweisedeckel
4	5562C-04	Schraube
5	5562C-05	Deckel
6	5562C-06	Puffer
7	5562C-07	Feder
8	5562C-08	O-Ring
9	5562C-09	O-Ring
10	5562C-10	Ventilschieber
11	5562C-11	Zylinderhalter
12	5562C-12	O-Ring
13	5562C-13	O-Ring
14	5562C-14	Distanzring
15	5562C-15	Kolben O-Ring
16A	5562C-16A	Kolben komplett
17	5562C-17	Zylinderdichtring
18	5562C-18	O-Ring
19	5562C-19	Zylinder
20	5562C-20	Puffer
21	5562C-21	Stößelführung
22	5562C-22	Deckeldichtring
23A	5562C-23A	Gehäuse
24	5562C-24	O-Ring
25	5562C-25	Deckel hinten
26	5562C-26	O-Ring
27	5562C-27	O-Ring
28	5562C-28	Ventil
29	5562C-29	O-Ring
30	5562C-30	O-Ring
31	5562C-31	O-Ring
32	5562C-32	Ventil Stößel
33	5562C-33	Feder
34	5562C-34	O-Ring
35	5562C-35	Ventilstange
36	5562C-36	Ventildeckel
37A	5562C-37A	Abzug kompl.
38	5562C-38	Stift

Pos. Nr.	Artikel Nr.	Beschreibung
39	5562C-39	Ring
40	5562C-40	Stift
41	5562C-41	Führung
42	5562C-42	Feder
43A	5562C-43A	Sicherungswinkel
44	5562C-44	Schraube
45	5562C-45	Mutter
46	5562C-46	Dichtung
47	5562C-47	Deckel unten
48	5562C-48	Schraube
49	5562C-49	Stift
50	5562C-50	Werkzeugplatte
51	5562C-51	Klapp-Fuss
52	5562C-52	Stift
53A	5562C-53A	Klappe kompl.
54	5562C-54	Schraube
55	5562C-55	Platte
56	5562C-56	Bund
57	5562C-57	Sicherheitstaster
58	5562C-58	Sicherheitsabdeckung
59	5562C-59	Schraube
60	5562C-60	Magazinschieber
61	5562C-61	Federhalter
62	5562C-62	Spiralfeder
63	5562C-63	Federbuchse
64	5562C-64	Stift
65	5562C-65	Schraube
66	5562C-66	Magazin
67	5562C-67	Magazinabdeckung
68	5562C-68	Schraube
69	5562C-69	Mutter
70	5562C-70	Befestigungswinkel
71	5562C-71	Schraube
72	5562C-72	Unterlagscheibe
73	5562C-73	Mutter
74	5562C-74	Feder
75	5562C-75	Feder