


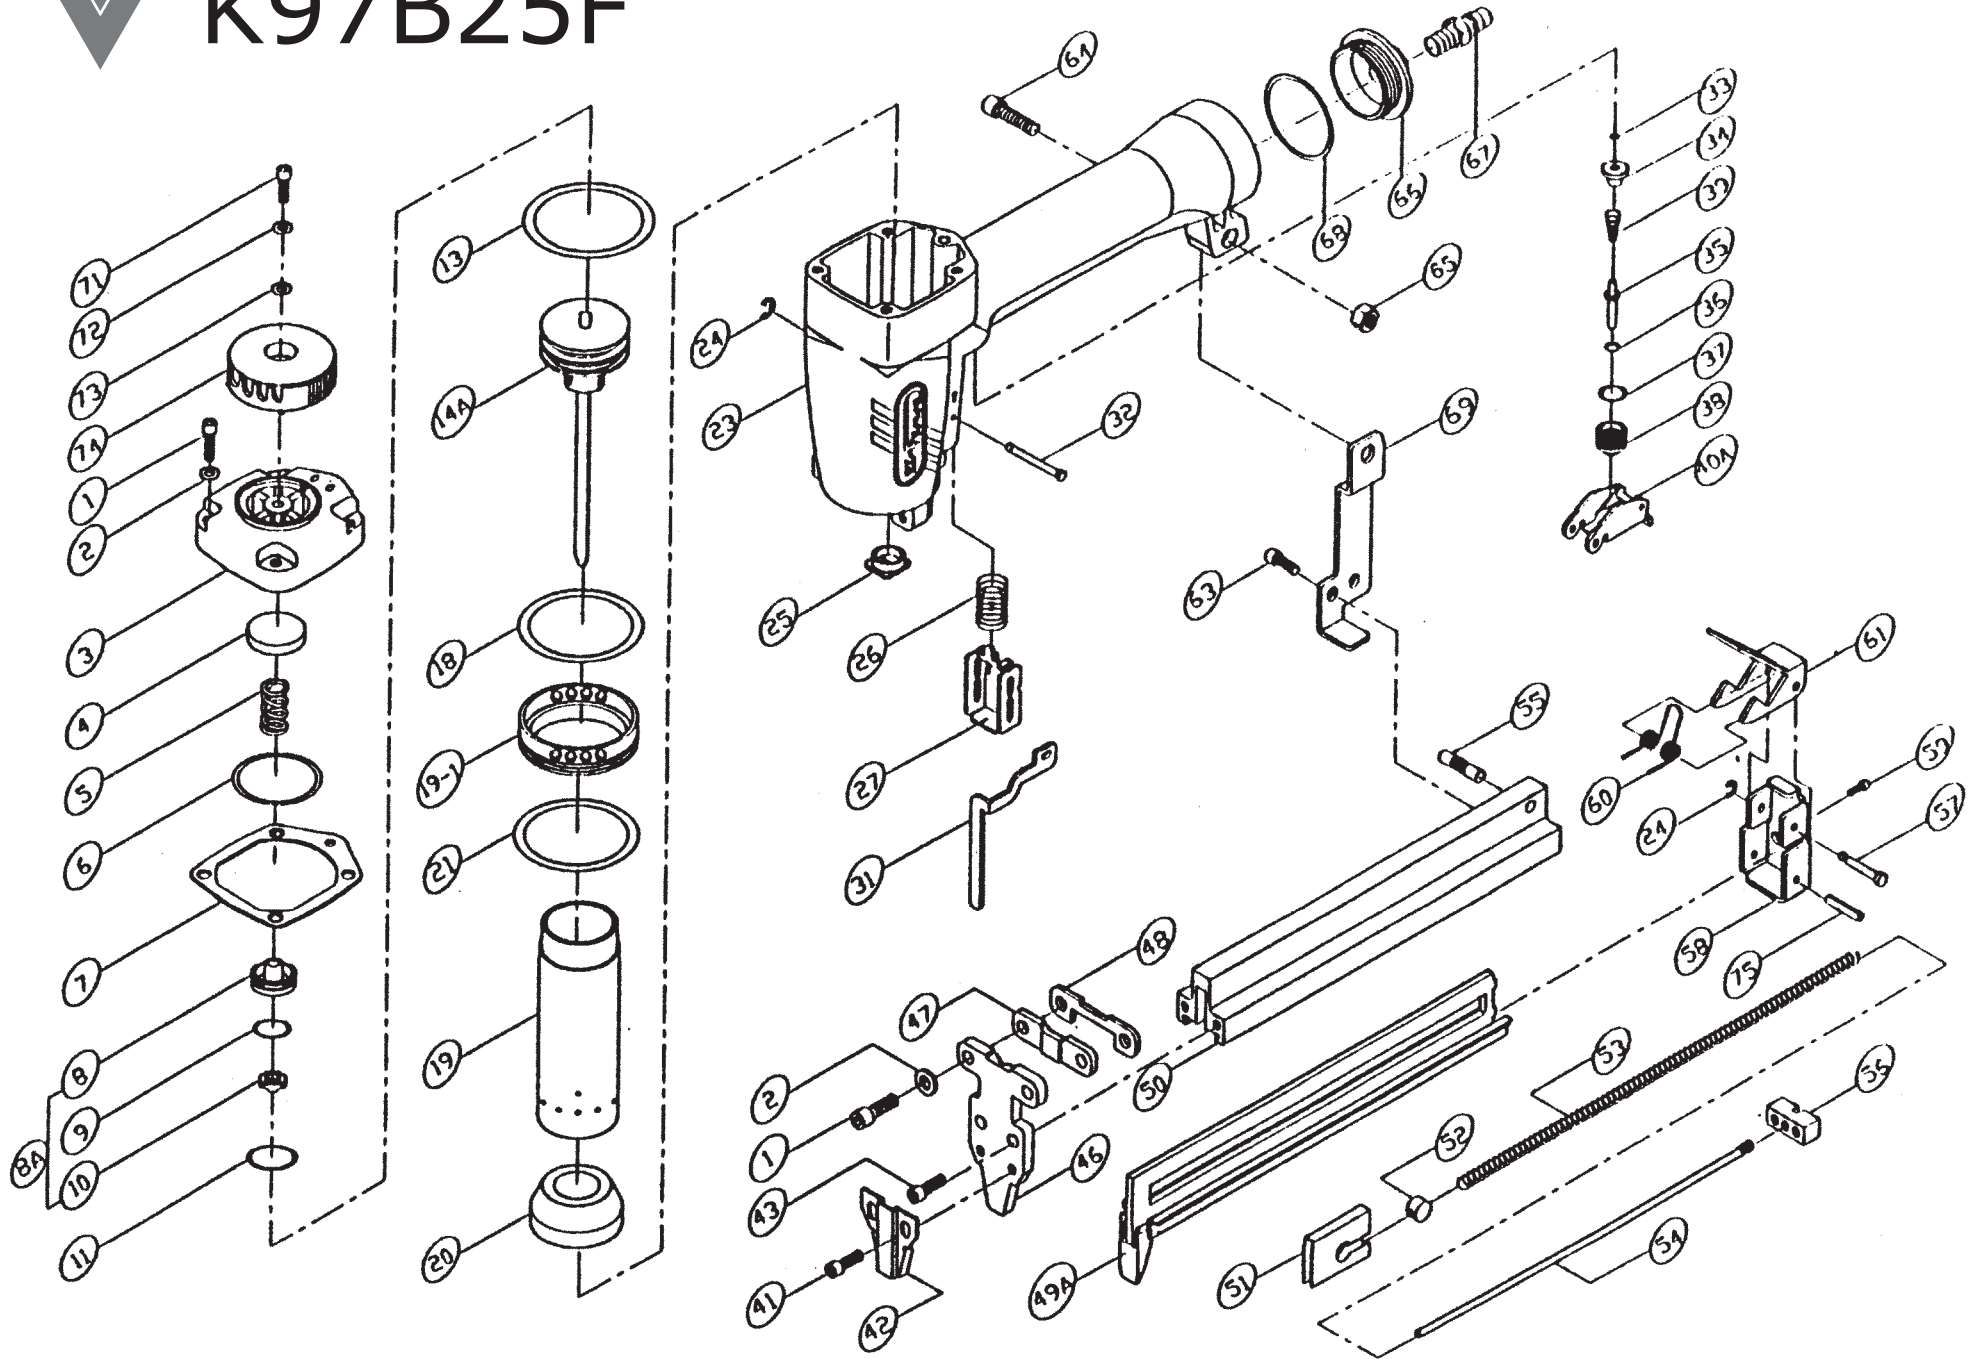

K97B25F



Pos. Nr.	Artikel Nr.	Beschreibung
1	T97B-01	Schraube
2	T97B-02	Federscheibe
3	T97B-03	Deckel
4	T97B-04	Puffer
5	T97B-05	Feder
6	T97B-06	O-Ring
7	T97B-07	Flachdichtung
8	T97B-08	Kopfventilkolben
8A	T97B-08A	Kopfventilkolben-Satz
9	T97B-09	O-Ring
10	T97B-10	Puffer
11	T97B-11	O-Ring
13	T97B-13	O-Ring
14A	T97B-14A	Kolben kompl.
18	T97B-18	O-Ring
19	T97B-19	Zylinder
19-1	T97B-19A	Ring
20	T97B-20	Puffer
21	T97B-21	O-Ring
22	T97B-22	O-Ring
23	T97B-23	Gehäuse
24	T97B-24	Rastscheibe
25	T97B-25	Düse
26	T97B-26	Feder
27	T97B-27	Sicherungsführung
31	T97B-31	Sicherungstaster
32	T97B-32	Bolzen
33	T97B-33	O-Ring
34	T97B-34	Ventilkopf
35	T97B-35	Ventilstange
36	T97B-36	O-Ring
37	T97B-37	O-Ring
38	T97B-38	Ventilführung

Pos. Nr.	Artikel Nr.	Beschreibung
39	T97B-39	Feder
40A	T97B-40A	Auslösehebel
41	T97B-41	Schraube
42	T97B-42	Abdeckung
43	T97B-43	Schraube
46	T97B-46	Werkzeugplatte
47	T97B-47	Platte Oben
48	T97B-48	Platte Unten
49A	T97B-49A	Magazinführung
50	T97B-50	Magazin
51	T97B-51	Magazinschieber
52	T97B-52	Bolzen
53	T97B-53	Magazinfeder
54	T97B-54	Führungsstange
55	T97B-55	Bolzen
56	T97B-56	Anschlag
57	T97B-57	Stift
58	T97B-58	Endanschlag
59	T97B-59	Schraube
60	T97B-60	Drehfeder
61	T97B-61	Hebel
63	T97B-63	Schraube
64	T97B-64	Schraube
65	T97B-65	Mutter
66	T97B-66	Deckel
67	T97B-67	Nippel
68	T97B-68	O-Ring
69	T97B-69	Stützwinkel
71	T97B-71	Schraube
72	T97B-72	Unterlagscheibe
73	T97B-73	Dichtring
74	T97B-74	Luftabweisedeckel
75	T97B-75	Stift