


Exploded View and Replacement Parts List

Exploded View

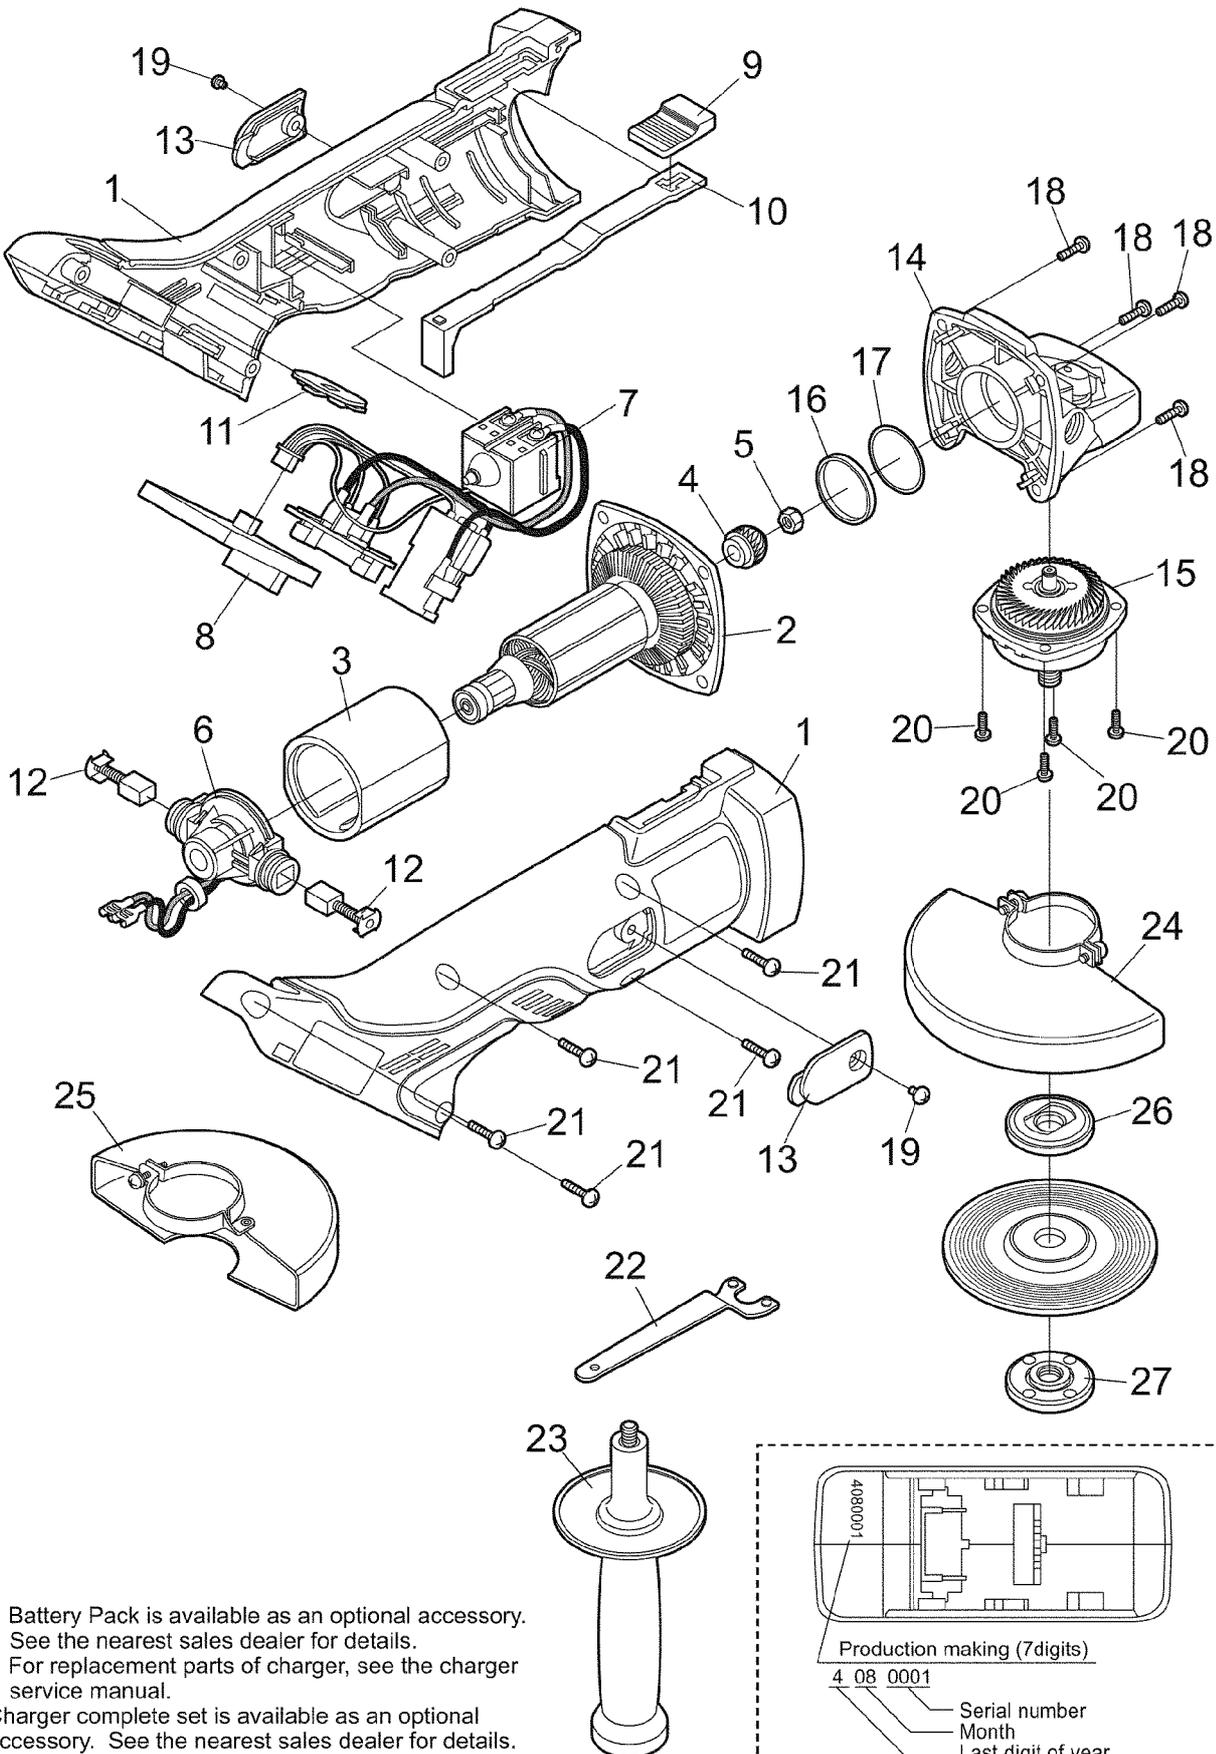

* Battery Pack is available as an optional accessory. See the nearest sales dealer for details.
 * For replacement parts of charger, see the charger service manual.
 Charger complete set is available as an optional accessory. See the nearest sales dealer for details.

Replacement Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Quantity	Remarks
	1	WEY46A2H3079	HOUSING AB SET	1	(for EUROPE)
	1	WEY46A2H3070	HOUSING AB SET	1	(for OCEANIA)
	2	WEY46A1L1007	ROTOR ASSEMBLY	1	
	3	WEY46A1L1587	STATOR ASSEMBLY	1	
	4	WEY46A1L1457	PINION GEAR	1	
	5	WEY4640L6427	HEX NUT	1	(M6), (5PCS/PK)
	6	WEY46A1K1038	BRUSH HOLDER	1	(2PCS/PK)
	7	WEY46A1K2007	SWITCH ASSEMBLY	1	
	8	WEY46A1L2107	MODULE ASSEMBLY	1	
	9	WEY4640L2017	SWITCH HANDLE	1	
	10	WEY4640L2917	SWITCH LEVER	1	
	11	WEY4640L3588	INDICATION PANEL	1	
	12	WEYT510L2317	BRUSH ASSEMBLY	2	(2pcs/PK)
	13	WEY46A1K3107	BRUSH CAP COVER	1	
	14	WEY46A1S4127	GEAR CASE ASSEMBLY	1	
	15	WEY46A2K1778	GEAR CASE COVER ASSEMBLY	1	
	16	WEY46A1K0977	SQUARE RING	1	
	17	WEY46A1S0847	WASHER	1	
	18	WEY46A1K9447	BIND HEAD SCREW	4	(4pcs/PK)
	19	WEY46A1K6097	CONTERSUNK SCREW	2	(M3*6), (2pcs/PK)
	20	WEY46A1K9137	TIGHT SCREW	4	(M4*14), (5pcs/PK)
	21	WEYT510L9447	TIGHT SCREW	5	(M4*18), (5pcs/PK)
	22	WEY4640S7868	DISC WRENCH	1	
	23	WEY4640K3237	SUPPORT HANDLE	1	
	24	WEY4640K1168	DISC FLANGE	1	
	25	WEY4640K1178	CLAMP NUT	1	
	26	WEY46A2K3747	GRINDING DISC GUARD	1	
	27	WEY46A2K3137	CUT-OFF DISC GUARD	1	
	28	WEY9L40R2788	BATTERY PACK COVER	1	
	-	WEY9661K7018	TOOL CASE	1	
	-	WEY46A2K8108	OPERATING INSTRUCTIONS	1	
	-	WEY4640L8917	GREASE	1	