


CS066A

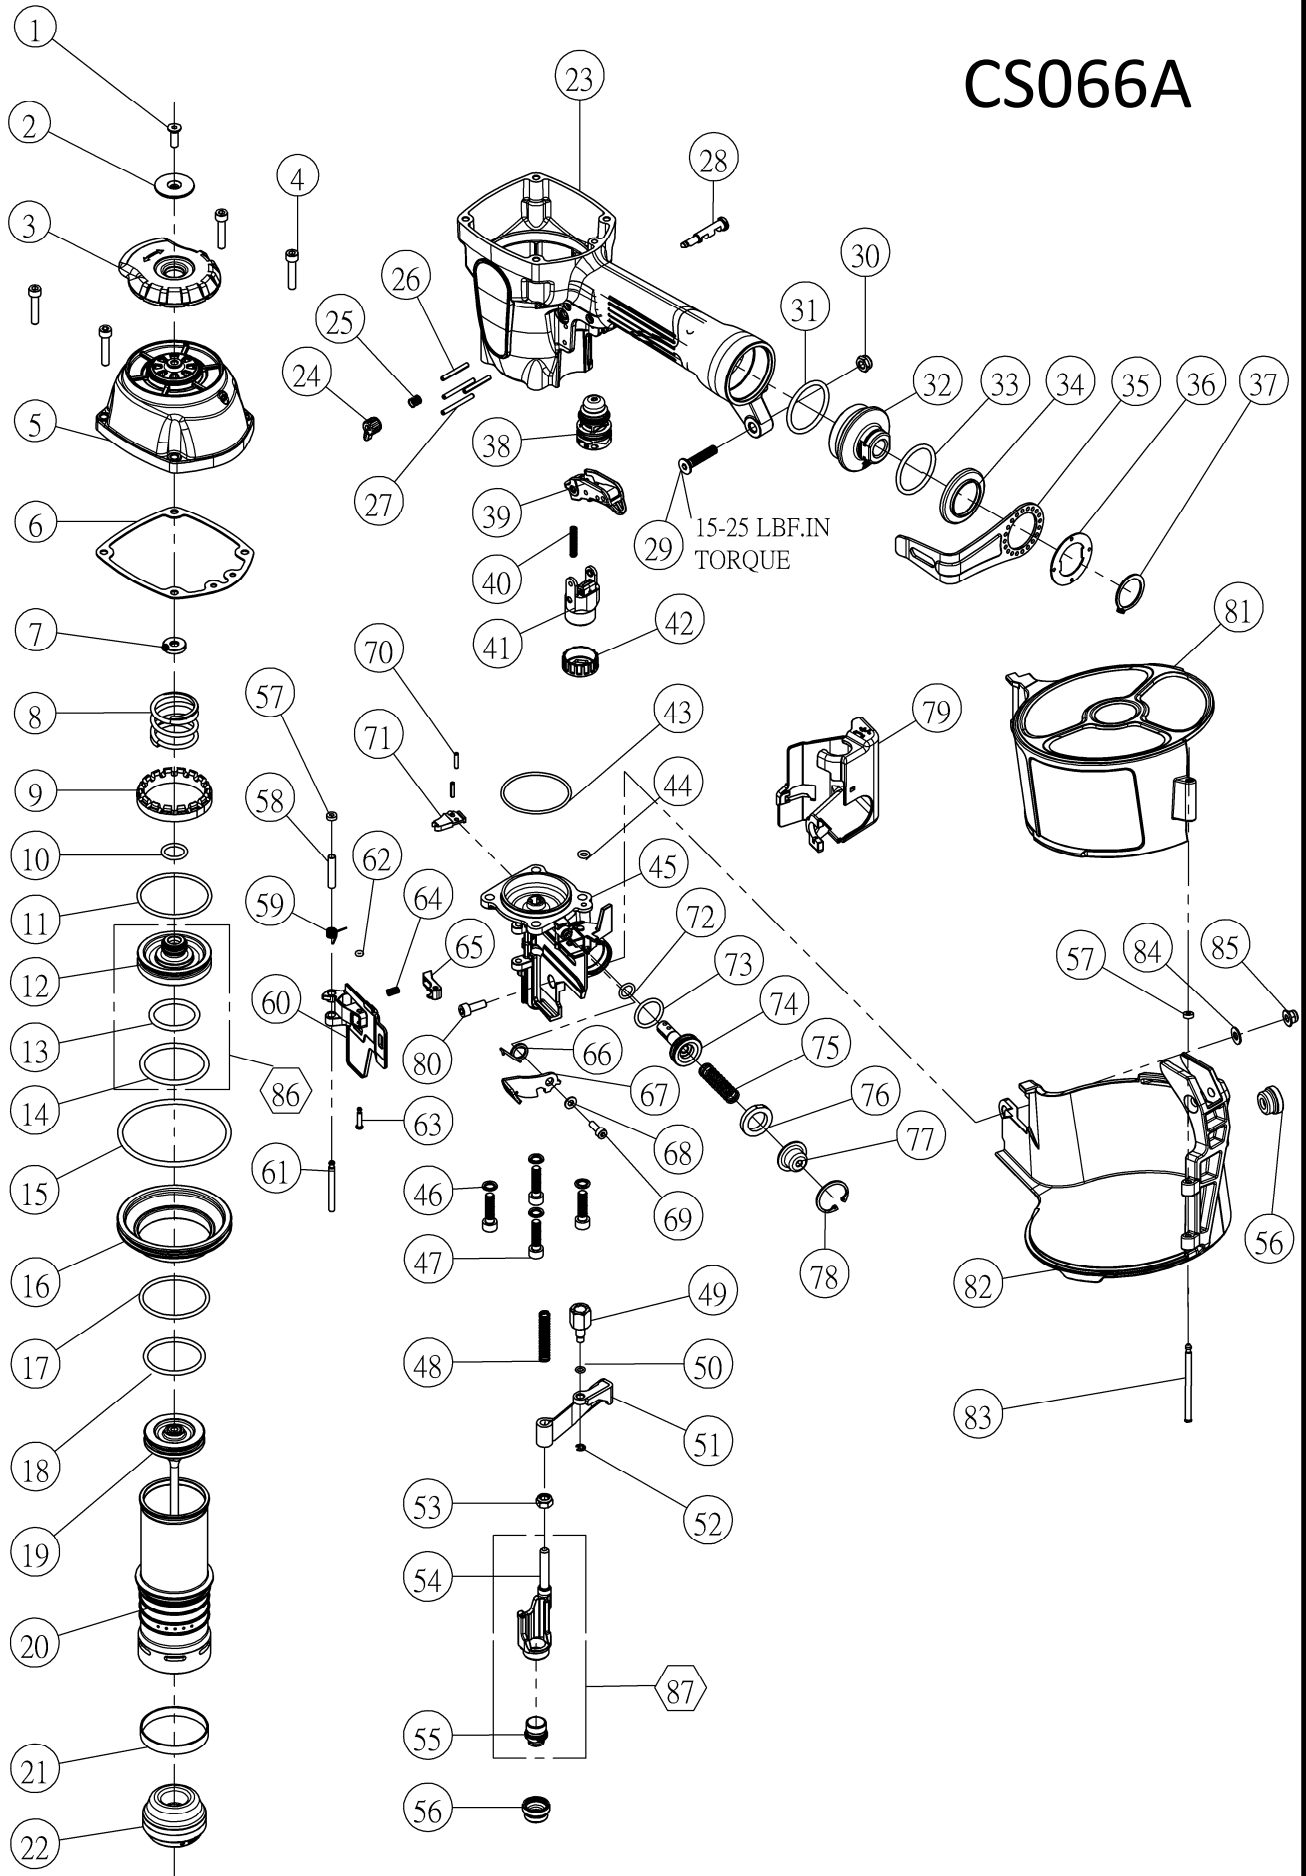

CS066A		<i>NOTE: When ordering spare parts. Please state the part name and part number.</i>					
Item	Part NO.	Description	Qty	Item	Part NO.	Description	Qty
1	104771	Screw M5 X 16	1	45	106101	Nose	1
2	104770	Bushing	1	46	101855	Washer	4
3	104075	Exhaust Cover	1	47	100077	Screw M6 X 22	4
4	100933	Screw M5 X 25	4	48	101543	Spring	1
5	105922	Cylinder Cap Unit	1	49	101554	Contact bolt	1
6	101505	Seal, Cylinder Cap	1	50	101555	O-Ring	1
7	101500	Deflector seal	1	51	106110	Contact Arm	1
8	101499	Spring	1	52	101482	E-Ring	1
9	103092	PU SPACER	1	53	101018	Nut M6	1
10	100535	O-Ring	1	87	101559	Front Contact Arm Unit	
11	101502	O-Ring	1	54	101558	Front Contact Arm	1
86	101647	Head Valve Piston Unit		55	101575	Contact Arm Bushing	1
12	101501	Head Valve Piston	1	56	101568	No-mar pad	2
13	101504	O-Ring	1	57	100078	Rubber Washer	2
14	101503	O-Ring	1	58	106124	Bushing	1
15	103129	O-Ring	1	59	106118	Spring	1
16	103127	Cylinder Ring	1	60	106104	Door	1
17	103128	O-Ring	1	61	106117	Step Pin	1
18	101576	O-Ring	1	62	106129	O-Ring	1
19	106116	Main Piston Unit		63	106125	Step Pin	1
19.1	101507	Main Piston	1	64	106120	Spring	1
19.2	106108	Driver	1	65	106107	Check Pawl	1
20	101511	Cylinder	1	66	106121	Spring, Door	1
21	101513	Check Valve	1	67	106109	Door Latch	1
22	101514	Bumper	1	68	106123	Washer	1
23	101723	Frame	1	69	106122	Screw	1
24	101519	Trigger lock dial	1	70	106119	Pin	2
25	101520	Spring	1	71	106106	Feed Pawl	1
26	100174	Roll Pin	2	72	100872	O-Ring	1
27	100966	Roll Pin	2	73	106128	O-Ring	1
28	101521	Trigger lock lever	1	74	106113	Feed Piston	1
29	106126	Screw M6 X 30	1	75	106115	Spring	1
30	106076	Nut, Elastic Stop M6	1	76	106114	Feed Piston Stop	1
31	100040	O-Ring	1	77	101549	Spring Collar	1
32	103089	End Cap	1	78	101550	C-Ring	1
33	101569	O-Ring	1	79	106102	Contact Arm Cover	1
34	101573	Spacer	1	80	101688	Screw M5 X 14	1
35	101570	Hook	1	81	106112	Magazine Cover	1
36	101571	Washer	1	82	106111	Magazine	1
37	101572	C-Ring	1	83	100079	Step Pin	1
38	101579	Trigger Valve Unit	1	84	100426	Washer	1
39	101649	Trigger Assembly	1	85	101096	Nut, Elastic Stop M5	1
40	101524	Spring	1	1. Orings – not included in the oring kits			
41	101650	Arm guide	1	2. Screws, bolts			
42	101531	Adjust dial	1	3. Pins - roll pin, solid pins			
43	101512	O-Ring	1	4. Standard washers – not special washers.			
44	100484	O-Ring	1	5. Nuts			