

 
H03

Tanaka

THT-2520/B


Serial No. - B089390

H03-01 THT-2520/B CYLINDER/PISTON/CRANK SHAFT

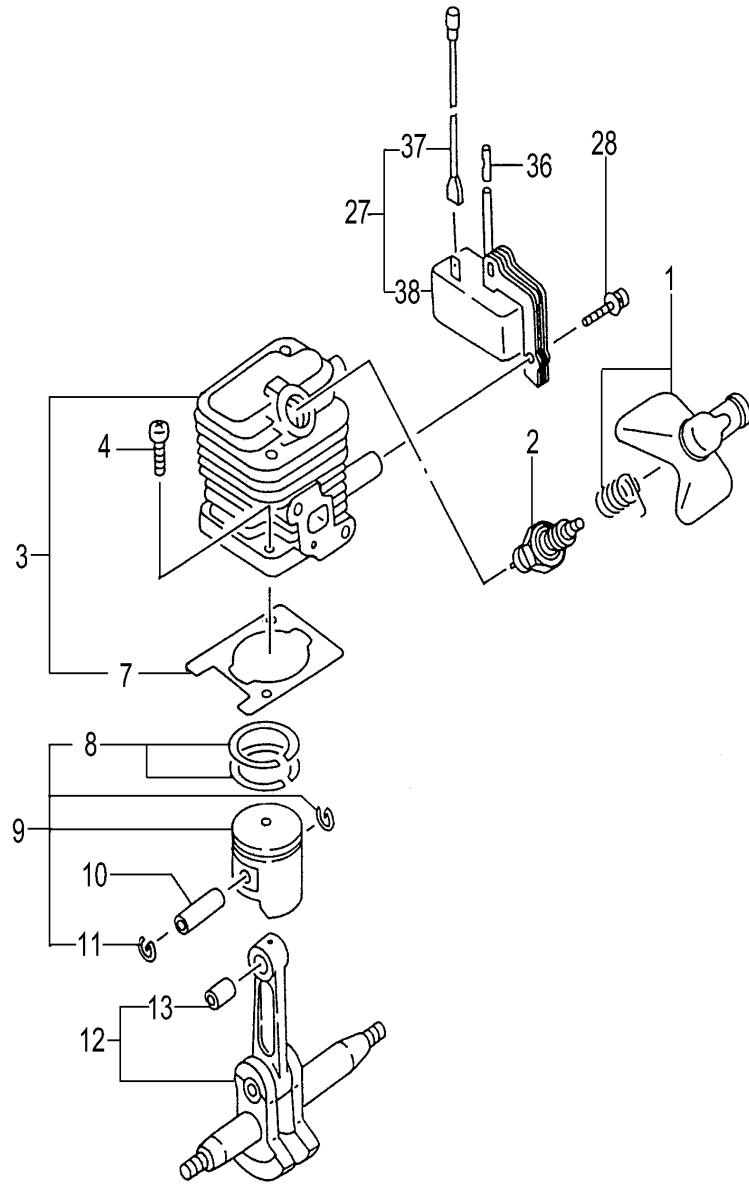


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
001	157-06500-91	1	
002	018-00555-20	1	
003	001-06600-90	1	
004	994-61050-184	2	
007	017-06500-20	1	
008	041-01601-20	2	
009	030-06600-90	1	
010	037-07045-20	1	
011	039-01620-20	2	
012	046-06500-80	1	
013	999-62081-225	1	
027	153-21532-90	1	
028	994-64040-184	2	
036	250-06500-20	1	
037	178-06500-80	1	
038	167-21532-80	1	

 H03-02 THT-2520/B CRANK CASE

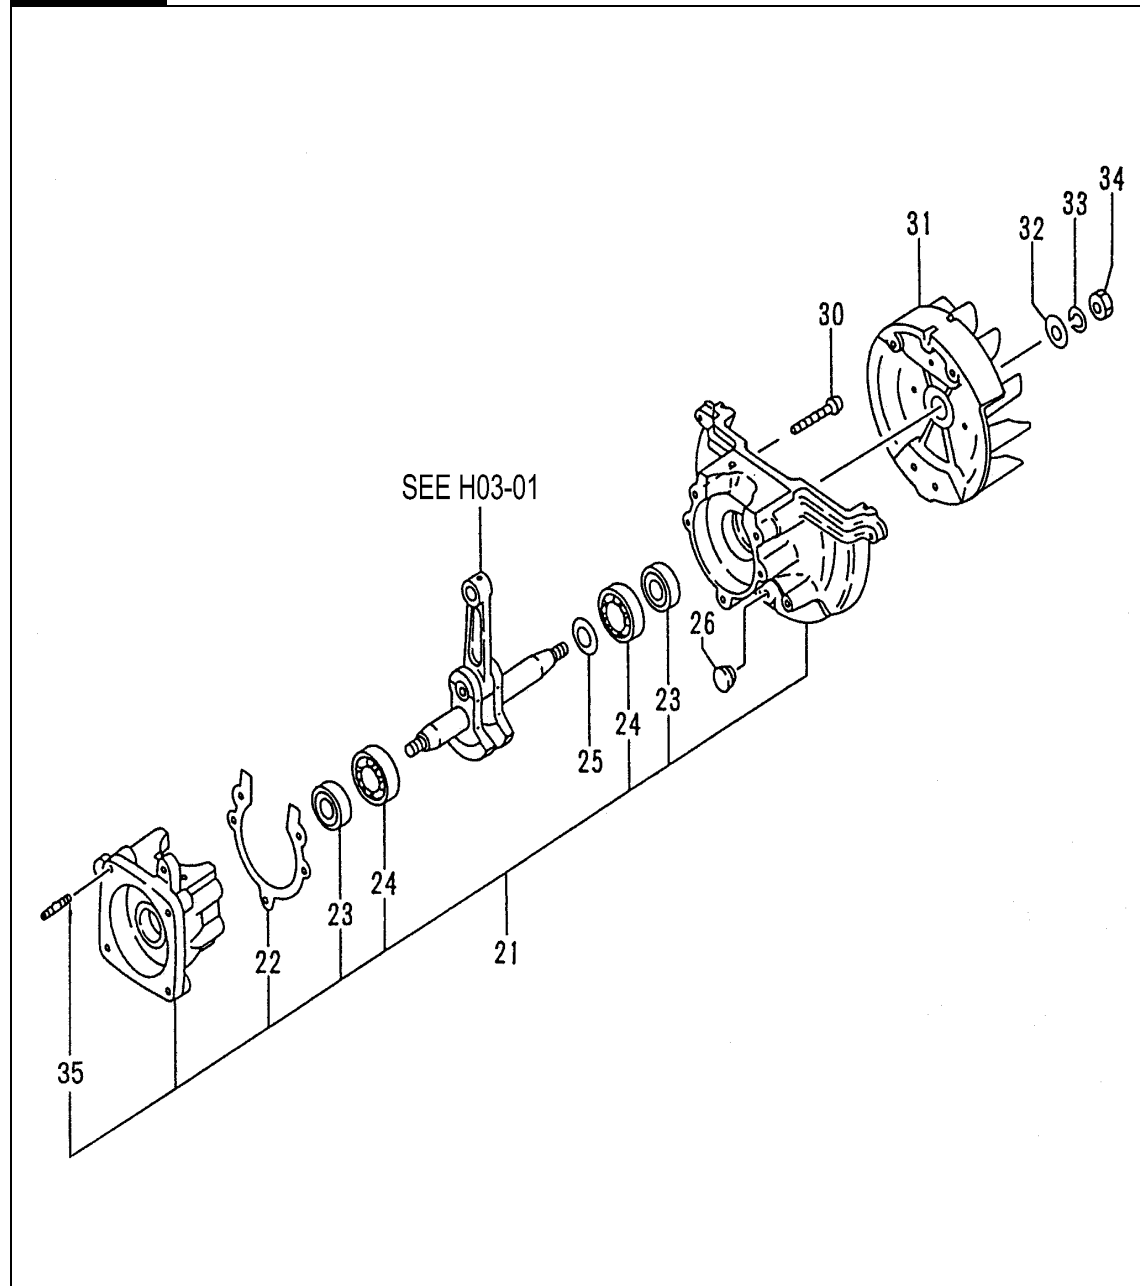


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
021	072-06500-90	1	
022	090-06500-20	1	
023	999-66122-200	2	
024	999-61600-115	2	
025	330-00200-21	V	
025	330-00200-22	V	
025	330-00200-23	V	
025	330-00200-24	V	
026	599-00601-20	1	
030	994-61050-304	3	
031	155-21523-80	1	
032	992-01080-011	1	
033	992-10080-012	1	
034	991-01080-011	1	
035	100-02100-20	2	

 H03-03 THT-2520/B ENGINE-1

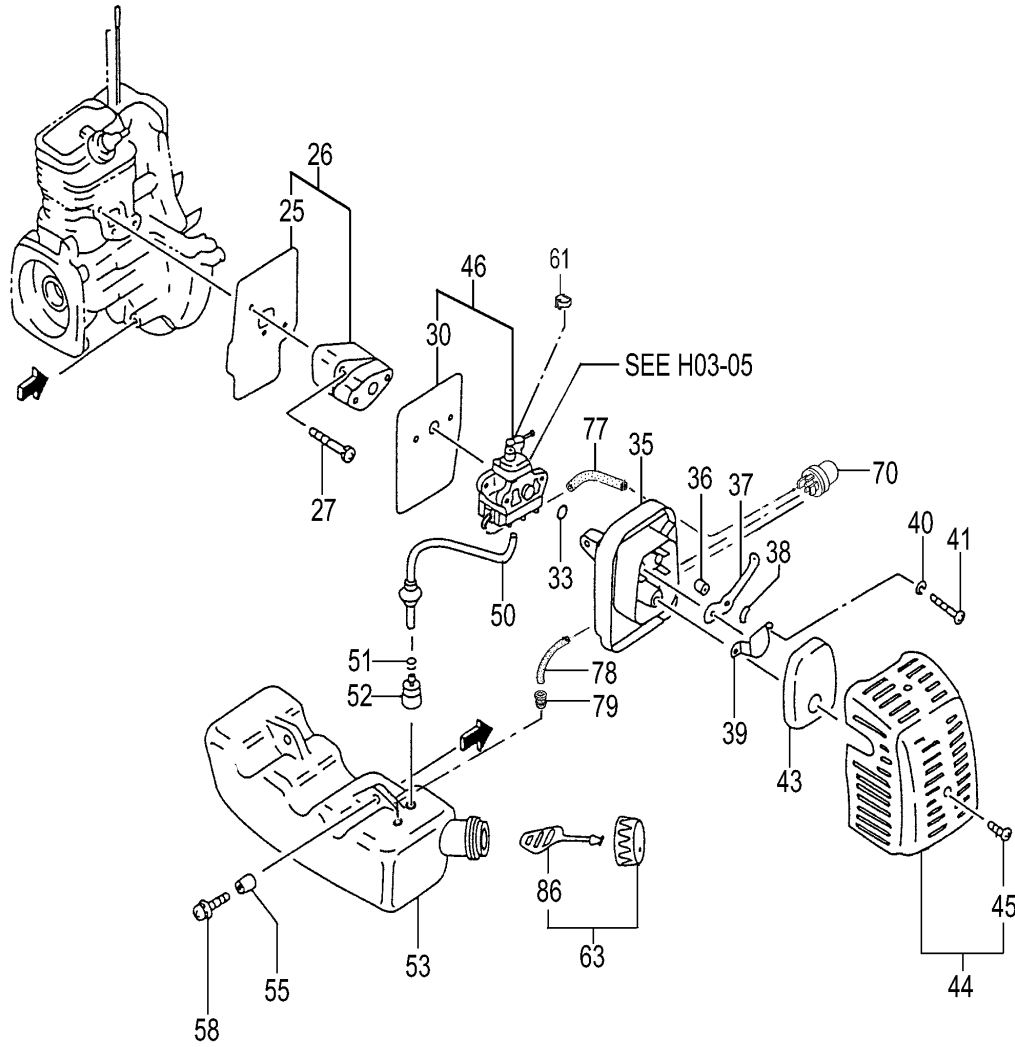


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
025	403-06500-20	1	
026	404-06500-90	1	
027	994-64050-254	2	
030	402-06500-20	1	
033	999-67015-000	1	
035	423-06500-81	1	
036	470-06500-20	2	
037	528-06500-20	1	- B027400
037	528-0650T-20	1	B027401 -
038	992-04080-031	1	
039	476-01700-20	1	
040	992-10050-012	2	
041	990-11050-602	2	
043	446-06500-21	1	
044	452-06600-91	1	
045	380-0637C-20	1	
046	455-06500-90	1	- T264300
046	455-0651E-90	1	- U092000
046	455-06504-90	1	- B027400
046	455-0651A-90	1	B027401 -
050	223-06500-90	1	
051	680-00731-20	1	
052	675-04042-80	1	
053	591-06500-21	1	- U092000
053	591-06504-22	1	U092001 -
055	659-00801-20	2	
058	994-63050-185	2	
061	560-07120-20	1	A088001 -
063	595-00093-90	1	
070	442-25143-80	1	U092001 -
077	700-02504-08	1	U092001 -
078	700-02504-07	1	U092001 -
079	534-32710-20	1	U092001 -
086	626-32550-20	1	

 H03-04 THT-2520/B ENGINE-2

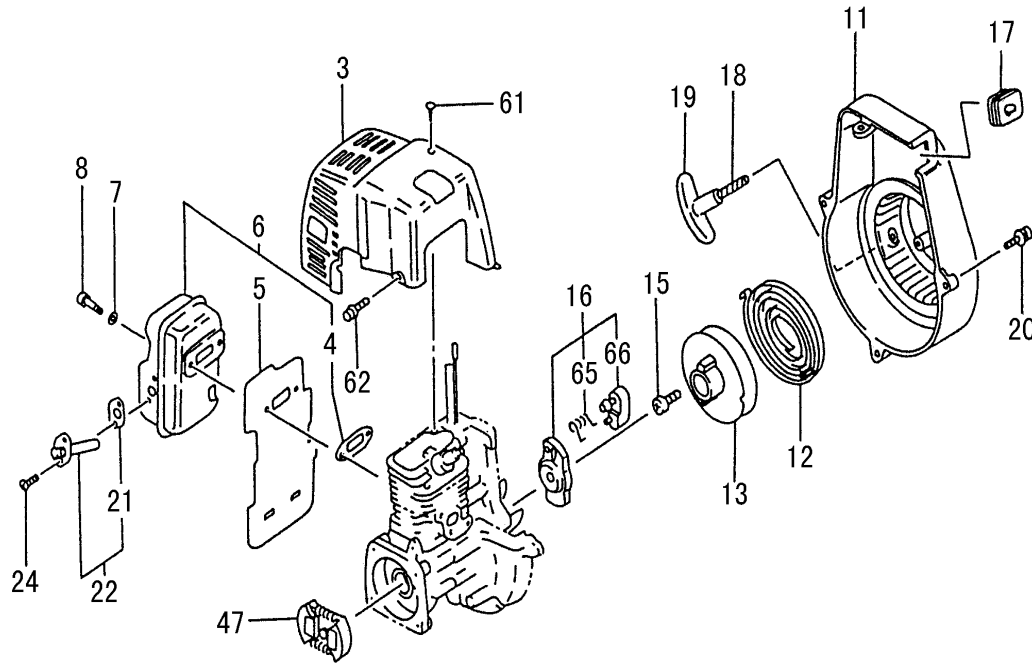


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
003	738-06600-20	1	
004	737-06500-20	1	
005	133-06500-20	1	
006	704-06504-91	1	
007	992-01050-011	2	
008	990-51050-503	2	
011	112-06500-80	1	
012	780-06097-20	1	
013	774-06097-20	1	
015	839-02010-20	1	
016	798-06500-90	1	
017	203-0604A-20	1	
018	783-06097-20	1	
019	785-06410-20	1	
020	994-63040-154	3	
021	751-06500-20	1	- V184420
022	721-06600-90	1	- V184420
024	994-14040-081	2	- V184420
047	277-0634F-90	1	
061	990-72045-164	1	
062	994-25040-128	2	
065	790-06097-20	1	
066	788-06500-20	1	

 H03-05 THT-2520/B CARBURETOR

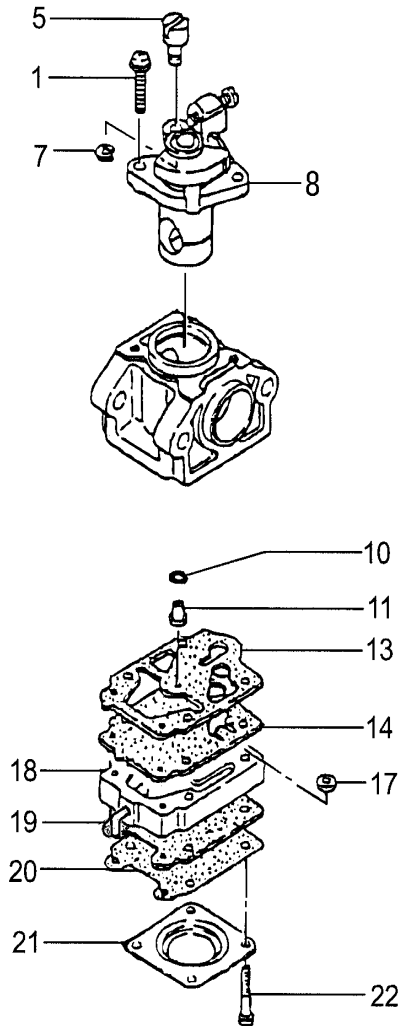


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	548-25140-20	2	
005	539-25120-20	1	
007	489-25100-20	1	
008	488-25145-80	1	- B027400
010	550-25100-20	1	
011	599-2001W-35	1	- T264300
011	599-200AW-41	1	- U092000
011	599-2000W-40	1	- B027400
011	599-200BW-34	1	B027401 -
013	577-25100-20	1	
014	576-25100-20	1	
017	578-25007-20	1	
018	575-25182-80	1	- T264300
018	575-25152-80	1	- U092000
018	575-25147-80	1	U092001 -
019	475-25001-20	1	- U092000
019	475-25038-20	1	U092001 -
020	474-25001-80	1	
021	476-25004-20	1	
022	548-25101-20	4	

 H03-06 THT-2520/B FRONT HANDLE

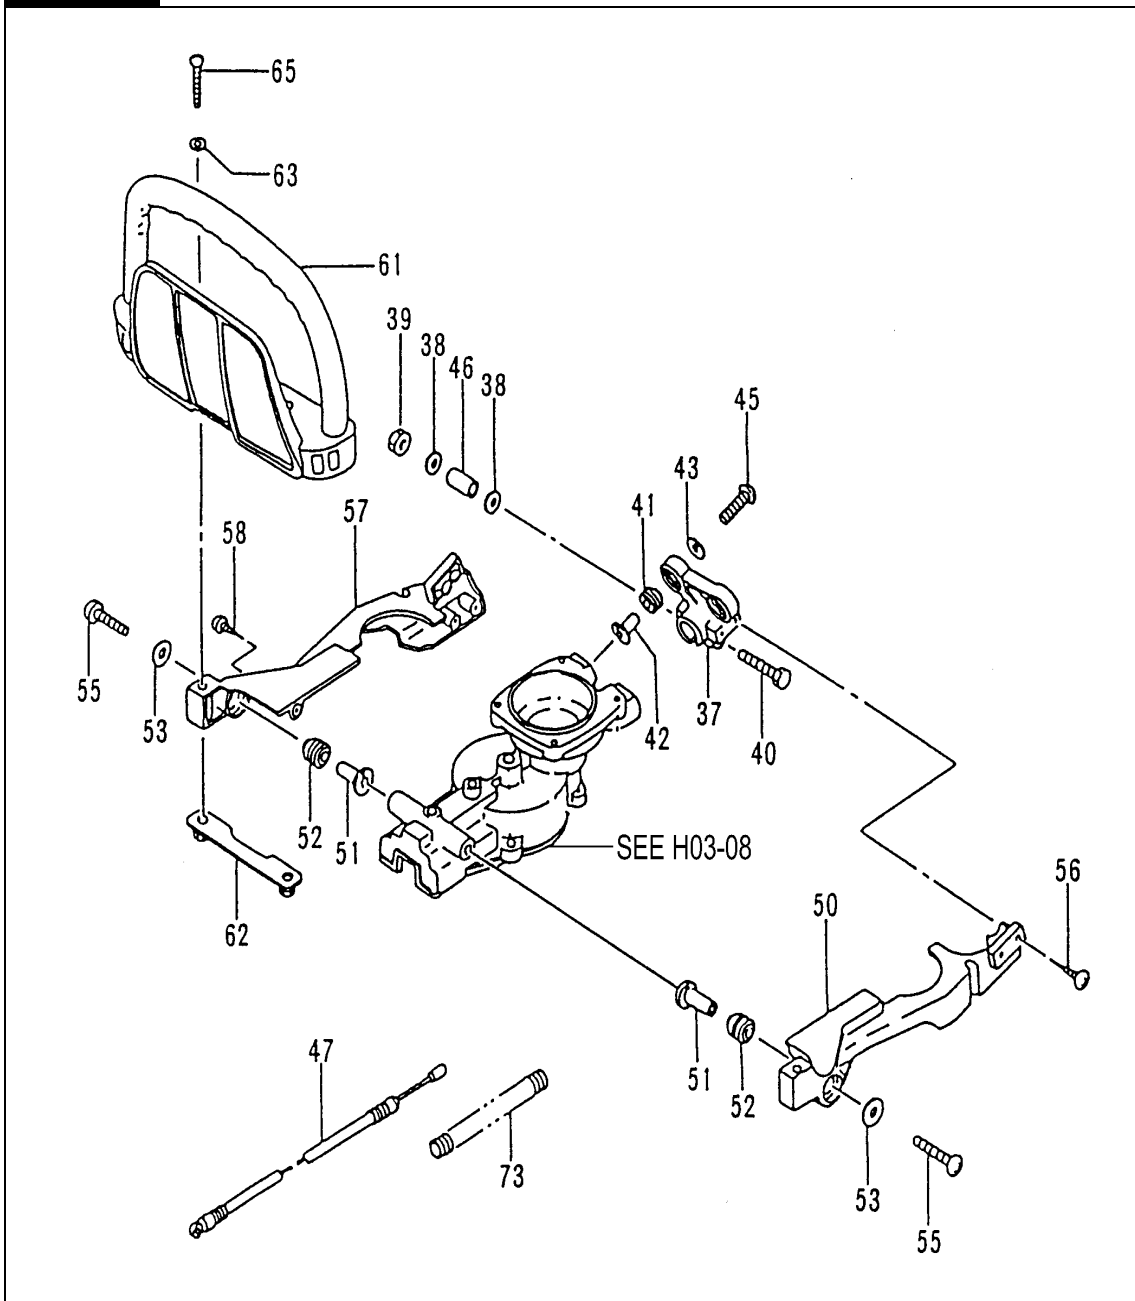


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
037	058-33160-20	1	
038	992-00060-011	2	
039	991-01060-011	1	
040	990-21060-501	1	
041	266-32750-20	2	
042	276-32710-20	2	
043	368-32057-20	2	
045	994-14050-301	2	
046	294-33160-21	1	
047	885-06500-80	1	
050	249-33160-20	1	
051	276-32710-20	2	
052	266-32750-20	2	
053	368-32057-20	2	
055	994-14050-301	2	
056	990-73045-124	4	
057	250-33160-20	1	
058	990-73045-124	1	
061	210-33160-22	1	
062	040-33160-80	1	
063	992-01050-011	2	
065	994-14050-401	2	
073	164-07007-00	1	

 H03-07 THT-2520/B REAR HANDLE

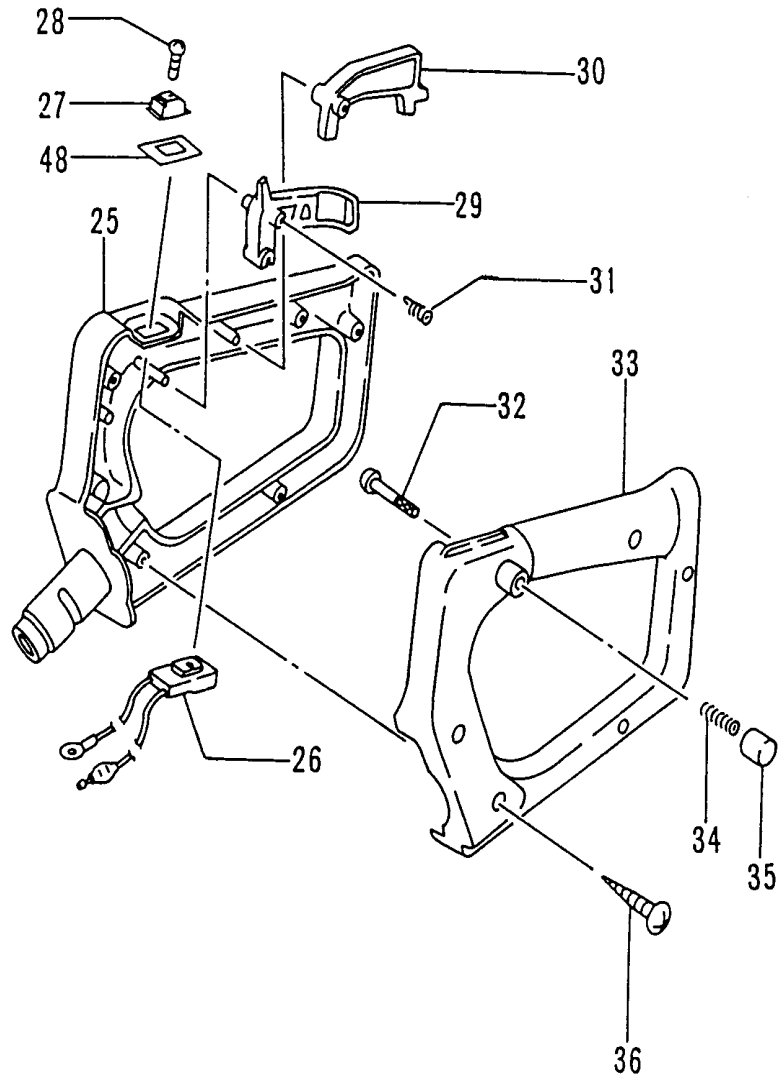



REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
025	050-33160-20	1	
026	170-33160-80	1	
027	258-11650-20	1	
028	994-31030-101	1	
029	230-33160-20	1	
030	231-33160-20	1	
031	232-33160-20	1	
032	064-32530-20	1	- U092000
033	051-33160-20	1	
034	066-32300-20	1	- U092000
035	725-32600-20	1	- U092000
035	765-32120-20	1	U092001 -
036	990-72045-164	6	
048	925-33160-20	1	

 H03-08 THT-2520/B GEAR CASE/BLADE(SERIAL NO.-Y323500)

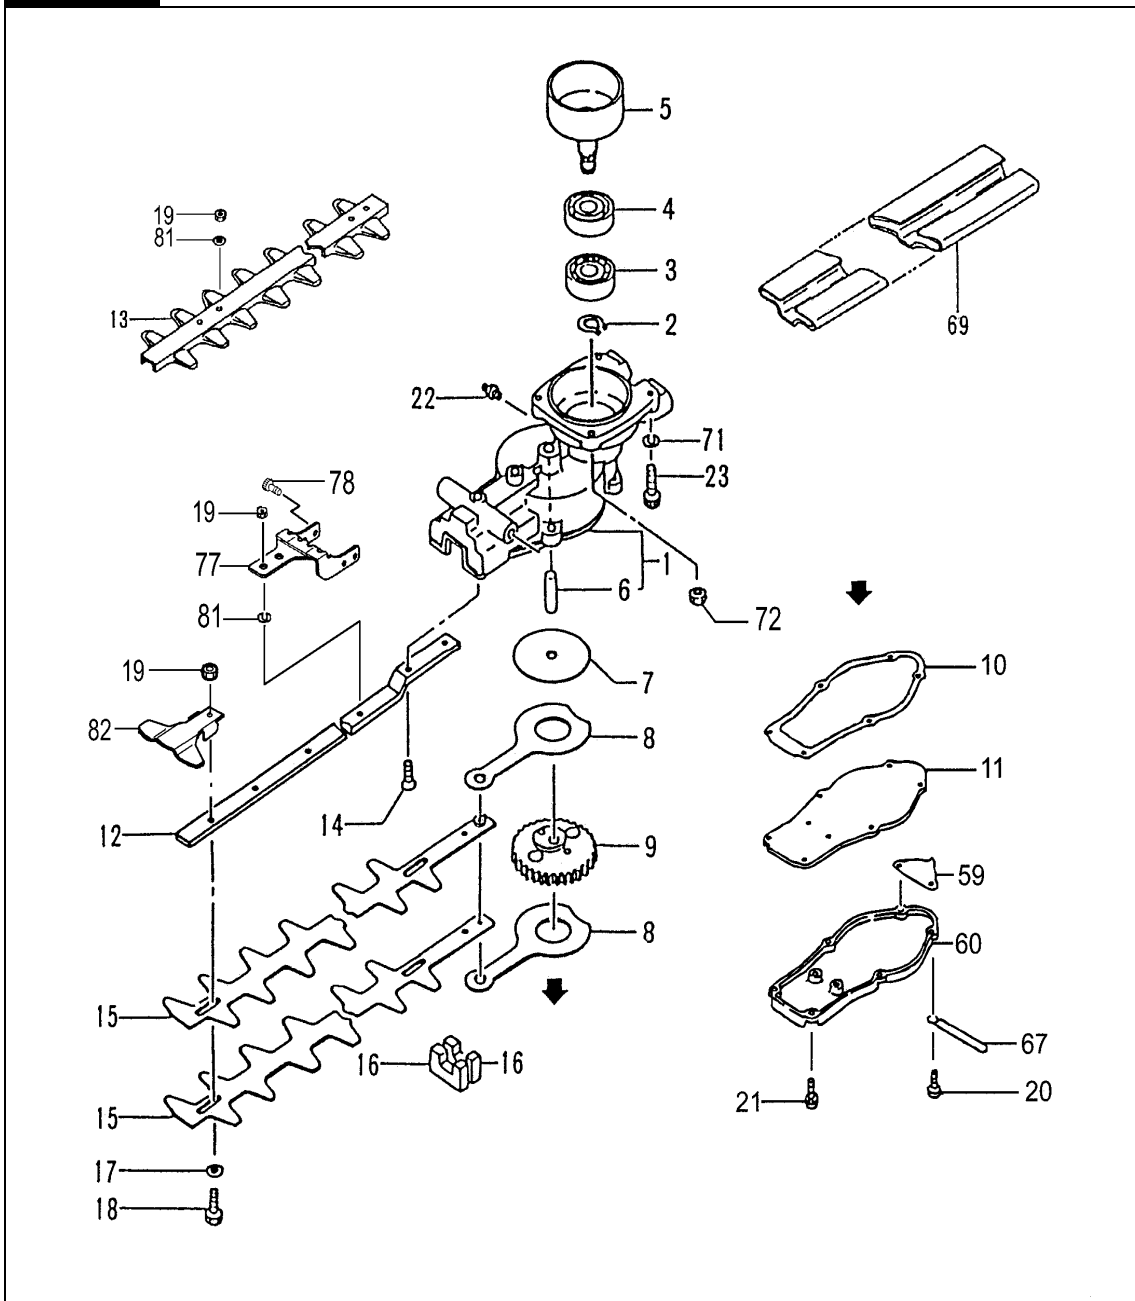


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	300-33160-81	1	
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
006	305-33160-20	1	
007	075-33160-20	1	
008	101-33160-20	2	
009	307-33180-20	1	
010	303-33160-20	1	
011	630-33165-20	1	
012	122-33190-22	1	
013	136-33190-20	1	
014	990-52060-165	2	
015	120-33190-21	2	
016	085-33160-20	2	
017	129-33202-20	6	
018	124-33202-21	6	
019	123-33202-20	6	
020	994-61040-155	2	
021	994-61040-124	6	
022	300-32250-80	1	
023	990-51060-143	2	
059	296-33190-20	1	
060	301-33191-20	1	
067	198-11600-80	1	
069	138-33190-20	1	
071	992-10060-012	2	
072	994-40060-011	2	
077	462-33191-20	1	V006701 -
078	994-61040-104	4	V006701 -
081	992-01060-011	3	- V006700
081	992-01060-011	2	V006701 -
082	135-33191-20	1	Y023151 -

  H03-09 THT-2520/B GEAR CASE/BLADE(SERIAL NO.-A026600)

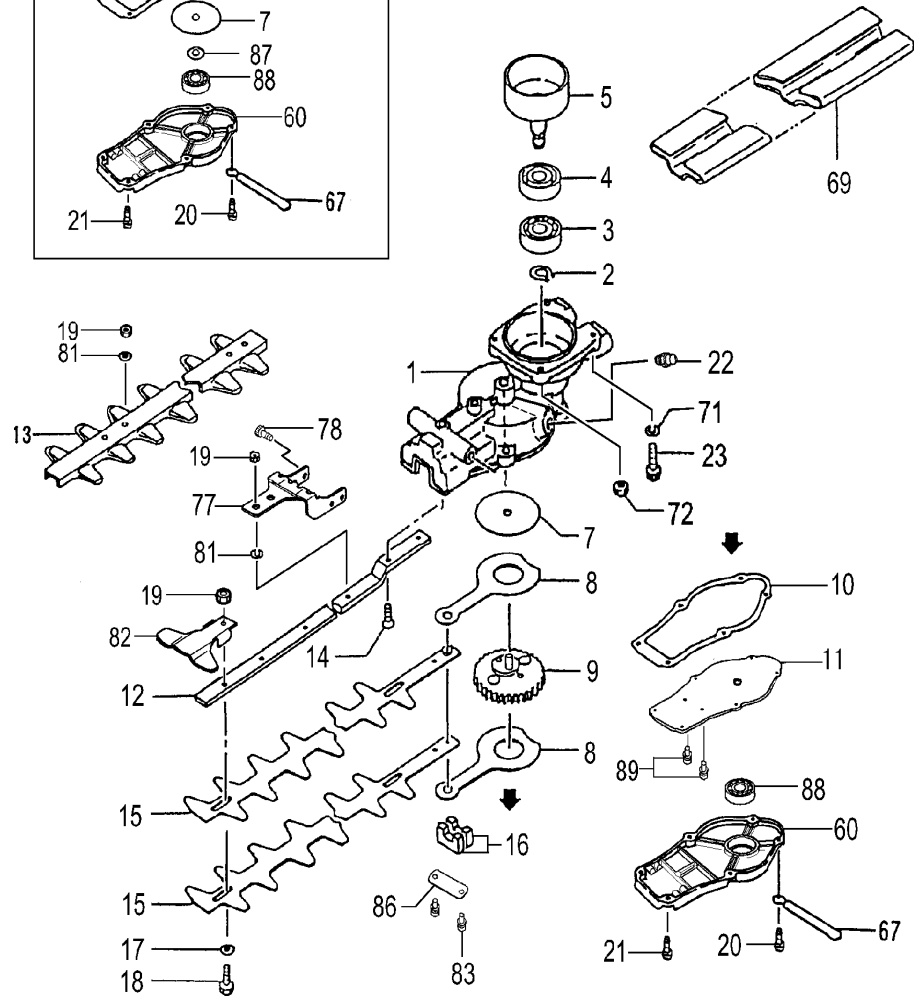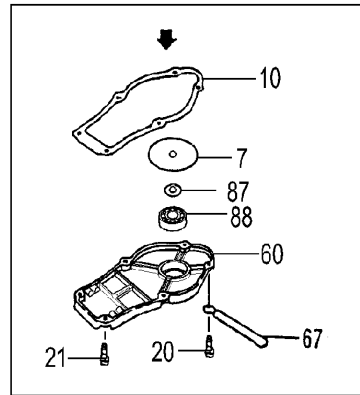



REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	300-33194-80	1	
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
007	075-33160-20	2	- Z242900
007	075-33160-20	1	Z242901 -
008	101-33190-20	2	
009	292-33194-80	1	
010	303-33160-20	1	
011	630-33165-20	1	Z242901 -
012	122-33190-22	1	
013	136-33190-20	1	
014	990-52060-165	2	
015	120-33190-21	2	
016	085-33160-20	2	
017	129-33202-20	6	
018	124-33202-21	6	
019	123-33202-20	6	
020	994-61040-124	2	
021	994-61040-124	4	
022	300-32250-80	1	
023	990-51060-143	2	
060	301-33191-21	1	
067	198-11600-80	1	
069	138-33190-20	1	
071	992-10060-012	2	
072	994-40060-011	2	
077	462-33191-20	1	
078	994-61040-104	4	
081	992-01060-011	2	
082	135-33191-20	1	
083	994-61040-104	2	- Z242900
086	105-32280-20	1	- Z242900
087	034-31200-25	1	- Z242900
088	999-61608-013	1	
089	994-61040-104	2	Z242901 -

 H03-10 THT-2520/B GEAR CASE/BLADE(SERIAL NO.A026601-)

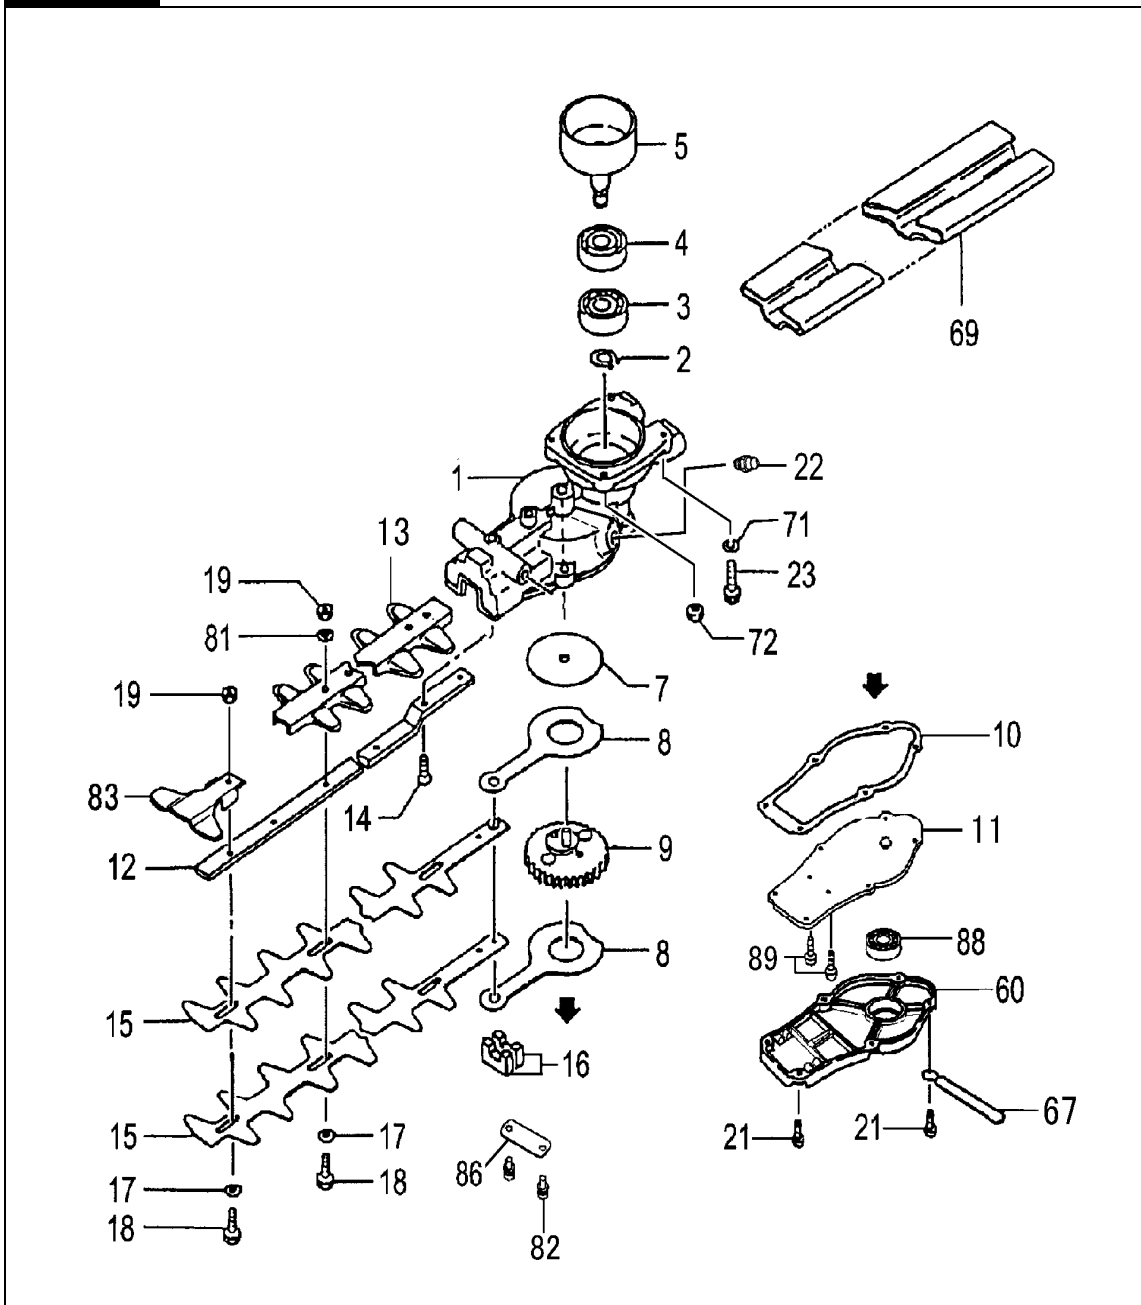

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	300-33194-81	1	
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
007	075-33160-20	1	
008	101-33190-20	2	
009	292-33194-80	1	
010	303-33160-20	1	
011	630-33165-20	1	
012	122-33191-20	1	
013	136-33190-20	1	
014	990-52060-165	2	
015	120-33190-21	2	
016	085-33160-20	2	
017	129-33202-20	6	
018	124-32287-20	6	
019	991-82060-001	6	
020	994-61040-124	2	
021	994-61040-124	4	
022	300-32250-80	1	
023	994-61060-184	2	
060	301-33191-21	1	
067	198-11600-80	1	
069	138-33190-20	1	
071	992-10060-012	2	A088000
072	994-40060-011	2	
077	462-33191-20	1	
078	994-61040-104	4	
082	135-33191-20	1	
088	999-61608-013	1	
089	994-61040-104	2	

  H03-11 THT-2520/B TOOLS

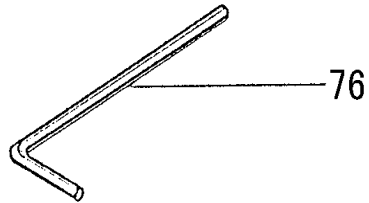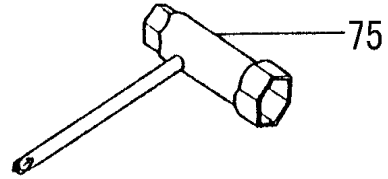

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
075	036-29331-50	1	
076	813-20000-20	1	