

Parts Catalog

Brush Cutter

Model: TBC-220SS

Part # 12704 2-14-97



Tanaka PRODUCT INFORMATION

Grass Trimmer Attachments



Pruning Saw Attachment

The versatile TPS-200 Pruning Saw attachment easily converts Tanaka straight shaft grass trimmers / brushcutters into a powerful pruning saw.



TPS-200 Pole Saw Attachment.

TPS-200 Features:

- 24" Shaft Provides a 98" Overall Length when mounted
- 10" Oregon® Bar & Chain
- Easy-Mount Coupler

To be used with the following Tanaka models:

- AST-7000 / 7000S / 210
- TBC-4500 / 4501 / 2211
- TBC-220 / 240
- TBC-250 / 2501 / 2510 / 265
- TBC-270PF/PN

TPS-EXT Pruning Saw Extension (Part # 748511) Add an extra two feet of reach with this pruning saw extension that will fit on both the TPS-2510 and TPS-270PN Pruning Saws. In addition, it can be added to Tanaka straight shaft grass trimmers that utilize the



For added reach and maneuverability, the TPH-200 Pole Hedge Trimmer attachment can be added to several Tanaka straight shaft grass trimmers / brushcutters.

TPH-200 Features:

- 22" Double Sided Cutting Blades
- Articulating / Pivoting Cutting Angle up to 130 degrees.

To be used with the following Tanaka models:

- AST-7000 / 7000S / 210
- TBC-4500 / 4501 / 2211
- TBC-220 / 240
- TBC-250 / 2501 / 2510 / 265
- TBC-270PF/PN



This simple, easy to install attachment is ideal for guick garden / flower bed weeding and cultivation. For maximum depth, the TMC-200 can dig up to 4 inches into the ground and 6" wide.

With a 49:1 reduction ratio, this heavy duty gear box gives you more tilling power.



To be used with the following Tanaka models:

- AST-7000 / 7000S / 210
- TBC-4500 / 4501 / 2211
- TBC-220 / 240
- TBC-250 / 2501 / 2510 / 265
- TBC-270PF/PN
- TBC-300 / 3010
- TBC-420PF

All data and specifications are subject to change without notice For more information, contact:

TBC-220SS

OPTIONS AND ACCESSORIES

NYLON LINE



746156 .095, Box, 50 ft.

746157 .105, Box, 50 ft.

746160 .095, 1/2 lb. Box, 143 ft.

746161 .105, 1/2 lb. Box, 110 ft

746165 .095, 1 lb. Box, 285 ft.


746166 .105, 1 lb. Box, 235 ft.

746169 .095, 3 lb. spool, 855 ft.

746170 .105, 3 lb. spool, 705 ft. 746173 .095, 5 lb. spool, 1425 ft.

746174 .105, 5 lb. spool, 1175 ft.

SHOULDER STRAPS

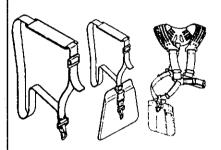

PSS-175 SS-250* SS-400*

SEMI-AUTO HEAD



746153 PNH-180

Parts List

ET-1201 Body
ET-1206 Cap
ET-1225 Adapter
ET-1205 Spool
ET-1207 Eyelet
ET-1208 Spring
ET-1209 Bump Disk

TMC-200 CULTIVATOR



BLADES



746101 Weed Blade, 9"X4T 746103 Weed Blade, 9"X48T 746104 Saw Blade, 9"X80T 746192 Carbide Blade, 9"X36T


ALUMINUM MANUAL HEAD



PCH-100 (746180)

PCH-300 (746190)

PERFECT MIX® 2-Cycle Engine Oil

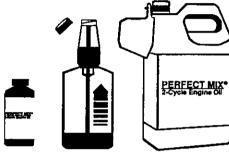


700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity

MANUALS / CATALOGS

10530 Owner's Manual 12704 Parts Catalog WSM-TBC Service Manual

BLADE SAFETY DISK

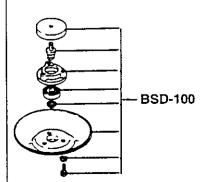

SPECIAL TOOLS

006-29326-000 Flywheel Remover 009-29323-500 Piston Pin Remover 015-29339-000 Gear Shaft Remover 016-29373-000 Pinion Remover

032-29373-000 Pinion Fitting Tool 001-29000-000 Tachometer 070-2000W-500 Pressure Tester 070-2000W-501 Carb. Tool Kit












^{*} Requires 355-37302-900

FIG.1 ENGINE

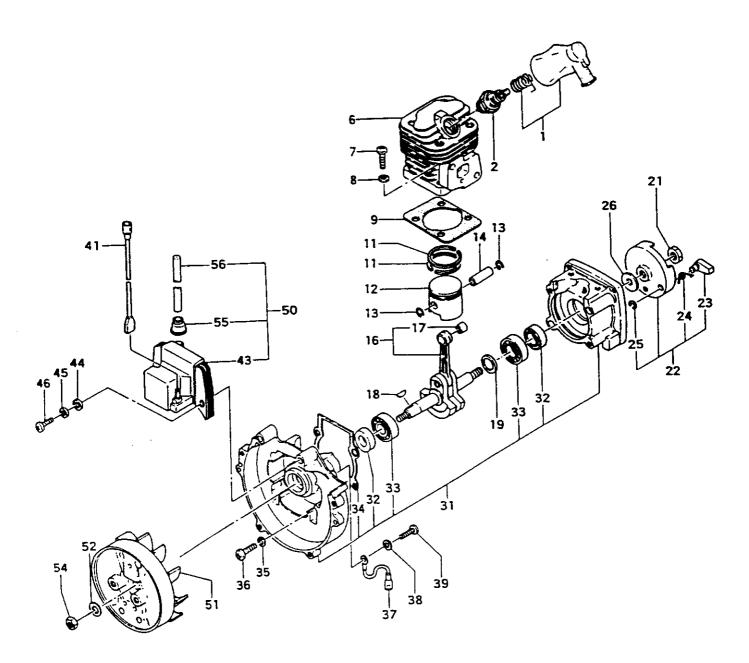

REF. PART NO. PART DESCRIPTION 1 157-0097A-900 CAP,SPARK PLUG,ASS'Y 2 018-11660-21 PLUG,SPARK 6 002-00980-201 CYLINDER 7 990-11050-181 SCREW,5X18 8 992-10050-012 WASHER,S,5 9 017-00980-200 GASKET,CYLINDER 11 041-01601-200 RING,PISTON 12 031-01601-20 PISTON 13 039-01620-200 CIRCLIP,PISTON PIN 14 037-01601-200 PIN,PISTON 16 046-0631A-81 CRANKSHAFT 17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-210 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30 21 991-01080-011 NUT,8		1 1 1 4 4 1 2 1 2 1 1 1 1 V V V V	BBDBAC ACACDC CDD	SERIAL NO	Shims are "as needed" to obtain
2 018-11660-21 PLUG,SPARK 6 002-00980-201 CYLINDER 7 990-11050-181 SCREW,5X18 8 992-10050-012 WASHER,S,5 9 017-00980-200 GASKET,CYLINDER 11 041-01601-200 PISTON 12 031-01601-200 PISTON 13 039-01620-200 CIRCLIP,PISTON PIN 14 037-01601-200 PIN,PISTON 16 046-0631A-81 CRANKSHAFT 17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-230 SHIM,12.2X19X.15 19 330-00200-240 SHIM,12.2X19X.30		1 1 4 4 1 2 1 2 1 1 1 1 V V V	BDBAC ACACDC CDD		
6 002-00980-201 CYLINDER 7 990-11050-181 SCREW,5X18 8 992-10050-012 WASHER,S,5 9 017-00980-200 RING,PISTON 12 031-01601-200 PISTON 13 039-01620-200 CIRCLIP,PISTON PIN 14 037-01601-200 PIN,PISTON 16 046-0631A-81 CRANKSHAFT 17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-220 SHIM,12.2X19X.10 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		4 1 2 1 2 1 1 1 1 V V V	DBAC ACACDC CDD		
7 990-11050-181 8 992-10050-012 9 017-00980-200 GASKET,CYLINDER 11 041-01601-200 PISTON PISTON PISTON O146-0631A-81 17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 SHIM,12.2X19X.10 SHIM,12.2X19X.20 SHIM,12.2X19X.30		4 1 2 1 2 1 1 1 1 V V V	BAC ACACDC CDD		
8 992-10050-012 WASHER,S,5 9 017-00980-200 GASKET,CYLINDER 11 041-01601-200 RING,PISTON 12 031-01601-200 PISTON 13 039-01620-200 CIRCLIP,PISTON PIN 14 037-01601-200 PIN,PISTON 16 046-0631A-81 CRANKSHAFT 17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-240 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		4 1 2 1 2 1 1 1 1 V V V	40 4040D0 0DD		
9 017-00980-200 GASKET,CYLINDER 11 041-01601-200 RING,PISTON 12 031-01601-20 PISTON 13 039-01620-200 CIRCLIP,PISTON PIN 14 037-01601-200 PIN,PISTON 16 046-0631A-81 CRANKSHAFT 17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		1 2 1 2 1 1 1 V V V	0 404000 000		
11 041-01601-200 RING,PISTON 12 031-01601-20 PISTON 13 039-01620-200 CIRCLIP,PISTON PIN 14 037-01601-200 PIN,PISTON 16 046-0631A-81 CRANKSHAFT 17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		1 1 1 1 V V	4040D0 0DD		
12		1 1 1 1 V V	04000 000		
12		1 1 1 1 V V	04000 000		
13 039-01620-200 CIRCLIP,PISTON PIN 14 037-01601-200 PIN,PISTON 16 046-0631A-81 CRANKSHAFT 17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		2 1 1 1 V V	4000 000		
14 037-01601-200 PIN,PISTON CRANKSHAFT 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 SHIM,12.2X19X.10 SHIM,12.2X19X.15 SHIM,12.2X19X.20 SHIM,12.2X19X.20 SHIM,12.2X19X.30		1 1 1 V V	000 000		
16 046-0631A-81 CRANKSHAFT 17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		1 1 1 V V	00000		
17 999-62081-225 BEARING,NEEDLE,F-810 18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		1 1 V V	0 000		
18 068-10100-200 KEY,WOODRUFF,3X13X4.5 19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		1 > >	000		
19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		> > >	D D		
19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		> > >	D D		
19 330-00200-210 SHIM,12.2X19X.10 19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		> > >	D D		
19 330-00200-220 SHIM,12.2X19X.15 19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		۷ ۷	D		
19 330-00200-230 SHIM,12.2X19X.20 19 330-00200-240 SHIM,12.2X19X.30		٧			correct c/s side clearance.
19 330-00200-240 SHIM,12.2X19X.30			D		correct dis side clearance.
		•	D		
21 991-01000-011 101,0		11	В		
			미		
22 798-06500-900 PULLEY,STARTER,ASS'Y		4	С	:	
1			. 1		
23 788-06097-200 PAWL,STARTER			C		
24 790-06097-200 SPRING,STARTER PAWL					
25 993-55005-000 RING,STOP,5		1	의		
26 359-10112-203 WASHER, CLUTCH B		1	A		
31 072-00980-900 CRANKCASE,ASS'Y		1	D		Includes bearings, seals & gasket
32 999-66122-240 SEAL,OIL,12227		2	Α		
33 999-61600-100 BEARING,BALL,#6001		2	В		
34 090-06097-200 GASKET,CRANKCASE		1	C		
35 992-10050-012 WASHER,S,5		4	Α		
36 990-11050-251 SCREW,5X25		4	D		
37 274-0631A-800 CORD,EARTH		1			
			- 1	:	
38 992-10040-012 WASHER,S,4		1	В		
39 990-11040-081 SCREW,4X8		1			
41 178-0631A-800 CORD,STOP,360mm		1	D		
43 167-20516-900 COIL,IGNITION		1			
44 992-00050-011 WASHER,SMALL,5		2	C		
45 992-10050-012 WASHER,S,5		2	Α		
46 990-11050-201 SCREW,MX20		2			
50 167-20516-900 COIL,IGNITION		1			
51 155-20508-800 ROTOR,MAGNETO		1			
	į				İ


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 1 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
52	992-01070-011	WASHER,7	1		D		
54	066-00000-200	NUT,FLYWHEEL	1		D		
55	560-20517-200	CAP,RUBBER	1]	С		
56	264-20516-200	LEAD,HIGH TENSION	1		С		
		·					

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 ENGINE COMPONENTS

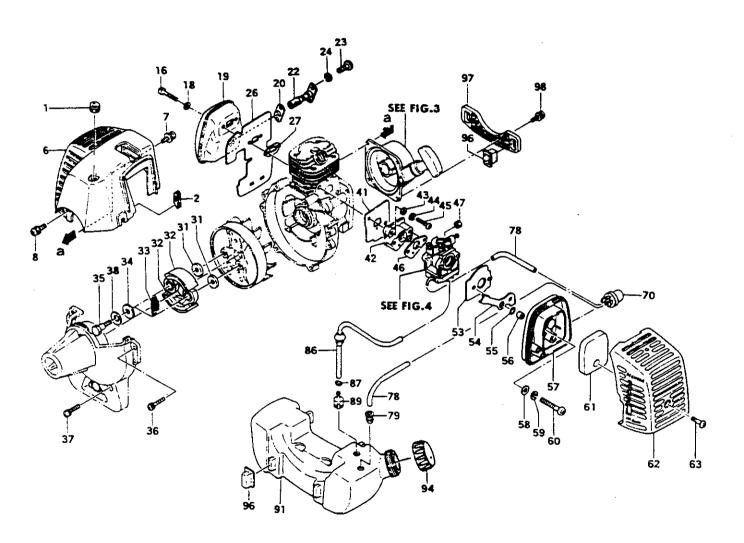

	UNEZ	1BC-22055				<u> </u>	
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	202-01003-201	GROMMET, SECONDARY CORD	1		С		
2	203-0631A-200	GROMMET	1		D		
6	738-0631A-201	PROTECTOR, MUFFLER	1		С		
7	994-15040-222	SCREW,PS,4X22	2		A		
8	994-15040-122	SCREW,4X12/PS	2		c		
16	990-51050-503	BOLT,HEX,5X50	2		C		
18	992-01050-011	WASHER,5	2		Α		
19	706-0637C-80	MUFFLER	1		D		
20	751-04200-201	GASKET,MUFFLER	1		С		
22	721-0098A-80	PIPE,TAIL	1		D		
1		SCREW,4X8	2		C		
24	992-10040-012	WASHER,S,4	2		В		
					ĺ		
	133-0631A-201		1		В		
		GASKET,MUFFLER	1		В		
		WASHER,CLUTCH,B	2		В	•	
i i	290-01620-800	· ·	2		Α		
1 1		SPRING,CLUTCH	1		A		
34	348-0602R-200	WASHER,CLUTCH A	2		В		
	057 0077 000						
i i	357-0075T-200		2	i	A		
1 1	994-14050-202		2				
1 1	994-14050-352		2		C		
1 '	992-05080-030		2				
		GASKET,INLET MANIFOLD	1				
42	404-0631A-800 	INSULATOR, CARBURETOR	1		В		
43	 002-00050-011	WASHER,SMALL,5	2		c		
	992-10050-012	· · · · · · · · · · · · · · · · · · ·	2		A		
1 1	990-11050-221	· ·	2	ŀ	B	[
		GASKET,CARBURETOR	1		В		
		NUT,6	1		В		İ
ł I		BASE,CLEANER	1				
					\mathbb{I}		
54	528-00980-200	PLATE,CHOKE	1		Ы		
i 1	999-67008-012		1		c		
1 1		COLLAR,CLEANER	1		c		
1 1	423-0637C-800	· · · · · · · · · · · · · · · · · · ·	1	-	В		
1		WASHER,SMALL,5	2	- 1	С		
1 1	992-10050-012	•	2		Ā		
1	990-11050-551		2				
1 1		ELEMENT, CLEANER	1		Α		
62	452-0637C - 200	COVER,CLEANER	1				
L.					\perp		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 2 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
63	380-0637C-200	BOLT, CLEANER	1		₿		
70	442-25143-800	PUMP,PRIMING	1		В		
78	700-02504-080	PIPE,FUEL,2.5X4X80	2		C		
79	534-32710-200	GROMMET, FUEL PIPE	1		С		
86	223-0162V-900	PIPE, FUEL, ASS'Y	1		Α		
87	680-00731-201	CLIP 6.3	1		В		
89	675-04042-80	FILTER,FUEL	1		Α		
91	591-0637C-21	TANK,FUEL	1		С		
94	595-0650A-90	CAP,TANK	1		Α		
96	655-00940-201	CUSHION, FUEL TANK	4		A		
97	653-0631A-200	BRACKET,TANK	1		С		
98	994-15040-222	SCREW,PS,4X22	2		Α		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 RECOIL STARTER


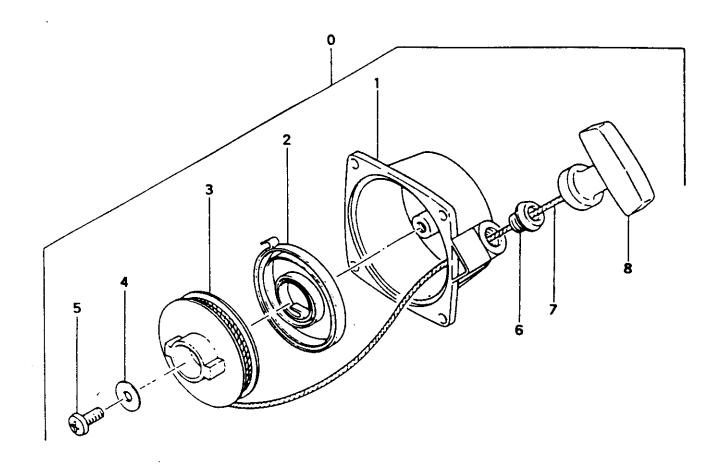


FIGURE 3

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
0	762-06097-902	STARTER,RECOIL ASS'Y	1.		В		
1	772-06097-202	BODY,RECOIL STARTER	1		С		
2	780-06097-200	SPRING,RECOIL	1		Α		
3	774-06097-200	PULLEY,STARTER	1		В		
4	801-06091-200	WASHER,ROPE REEL	1		С		
5	990-15050-121	SCREW,5X12	1		Α		
6	782-06097-200	RECEIVER,ROPE	1		D		
7	783-06097-200	ROPE,STARTER	1		С		
8	785-06097-200	HANDLE,STARTER	1		С		
L							

FIG.4 CARBURETOR

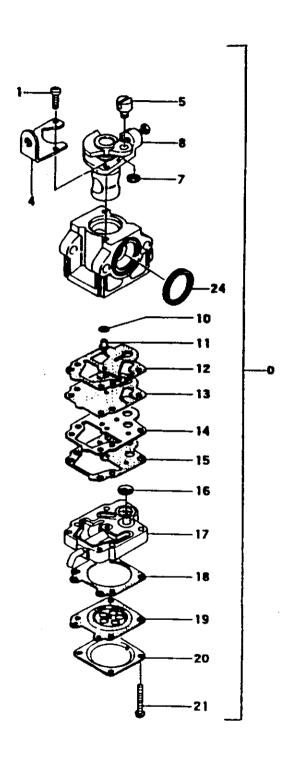

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
0	455-25144-900	CARBURETOR,ASS'Y	1		C		
1	514-25100-200	SCREW,THROTTLE SET	2		ם		
4	544-25120-200	STAY,ADJUST,CABLE	1		D		
5	539-25120-200	SWIVEL	1.		D.		
7	489-25100-200	RING,STOP	1		D		
8	488-25129-800	VALVE,THROTTLE	1		С		
						İ	
10	550-25100-200	O-RING	1		С		
11	599-2000W-430	JET,MAIN,#43	1		D		* Contained in Carb. Repair Kit
12	~~~	*GASKET,PUMP	1		В		650-25124-900
13	~~~	*DIAPHRAGM,PUMP	1		В		(Not availiable individually)
14	523-25100-201	PLATE,PUMP	1		C		
15	522-25100-200	PLATE,CIRCUIT	1		C		
16	~~~	*SCREEN,INLET	1		C		
17	575-25130-800	BODY,PUMP	1		С		
18	~~~	*GASKET,DIAPHRAGM	1		Α		
19	~~~	*DIAPHRAGM,METERING	1		Α		
20	476-25004-200	COVER,DIAPHRAGM	1		D		
21	548-25101-200	SCREW,SET	4		D		
24	431-0634C-200	PACKING,CLEANER	1		С		
	:						

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.5 CLUTCH CASE


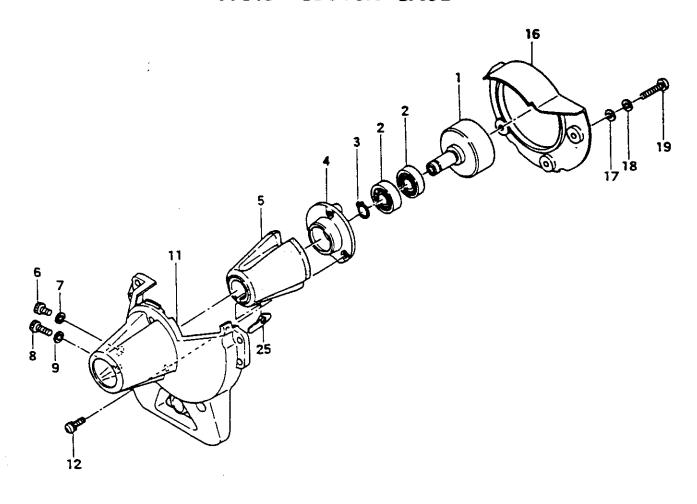


FIGURE 5

		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	-		_		
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	289-0631A-802	DRUM,CLUTCH	1		Α		
2	999-61600-103	BEARING,BALL,#6001D	2		Α		
3	993-50012-002	RING,STOP,C-12 EX	1		Α		
4	374-0631A-20	FLANGE,CLUTCH	1		В		
5	599-0631A-802	CUSHION	1		С		
6	990-51050-103	BOLT,HEX.HOLE,5X10	1		С		
7	992-10050-062	WASHER,S,5	1		D		
8	990-51050-203	BOLT,HEX.HOLE,5X20	1		C		
9	992-10050-062	WASHER,S,5	1		D		
11	112-0631A-201	CASE,FAN	1	•	D		
12	994-14050-122	SCREW,S,5X12	3		₿		
16	091-0631A-200	SHIELD,HEAT	1		D		
17	992-01040-011	WASHER,4	3		С		
18	992-10040-012	WASHER,S,4	3		В		
19	990-11040-121	SCREW,4X12	3		В		
25	249-0165A-21	SPACER	1		D		


FIG.6 HANDLE

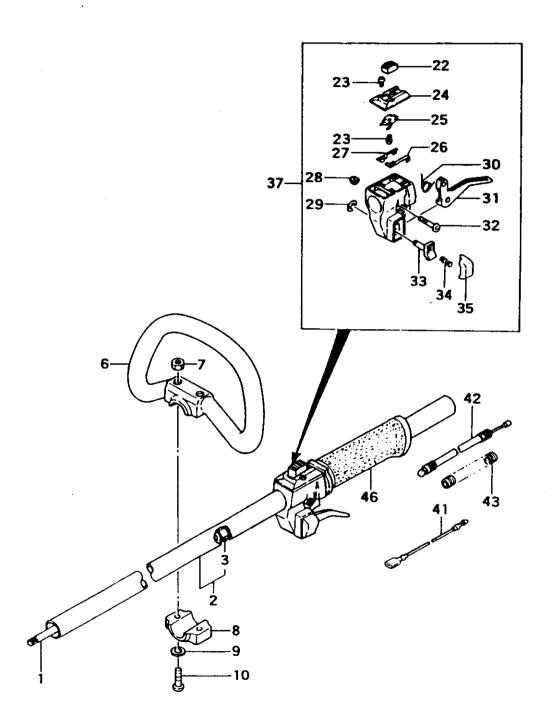

	150-22035 FARTS LISTING									
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS			
1	343-37300-200	SHAFT,DRIVE	1		Α					
2	341-37601-81	PIPE,DRIVE SHAFT	1	[В					
3	347-37601-900	BUSHING,ASS'Y	5		C					
6	500-37300-200	HANDLE,D	1		С					
7	991-01060-041	ŃUT,6	2		D					
8	506-37300-200	BRACKET,HANDLE,A	1		С					
9	992-01060-061	WASHER,6	2		D					
10	990-23060-431	BOLT,P,6X43	2		C					
22	162-37101-200	SWITCH,STOP	1		C	-				
23	993-42030-081	SCREW, TAPPING, 3X8	3		D					
24	259-37101-200	BASE,STOP SWITCH	1		C					
25	262-37101-200	SPRING,STOP SWITCH	1		D					
26	177-37101-200	TERMINAL, EARTH B	1		С	;				
27	176-37101-200	TERMINAL, EARTH A	1		D					
28	991-86050-000	NUT,LOCK,5	1		D					
29	993-55060-001	RING,STOP,6	1		D					
30	832-37101-200	SPRING,RETURN	1		C					
31	880-37101 - 200	LEVER,THROTTLE	1		В					
32	994-31050-251	 SCREW,S.,5X25	1		С					
33	853-37101-200	SHAFT,LOCK BUTTON	1		D					
34	958-37101-200	SPRING,LOCK,BUTTON	1		D					
35	956-37101-200	BUTTON,LOCK	1		D					
37	870-37300-900	LEVER,THROTTLE ASS'Y	1		Α					
41	178-37300-801	CORD,STOP 230mm	2		С					
42	885-0631A-802	 WIRE,THROTTLE	1		Α					
43	164-13014-010	TUBE,PROTECTION	1		D					
46	504-37300-200	GRIP,SHAFT	1		D					
	•		1							

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.7 GEAR CASE

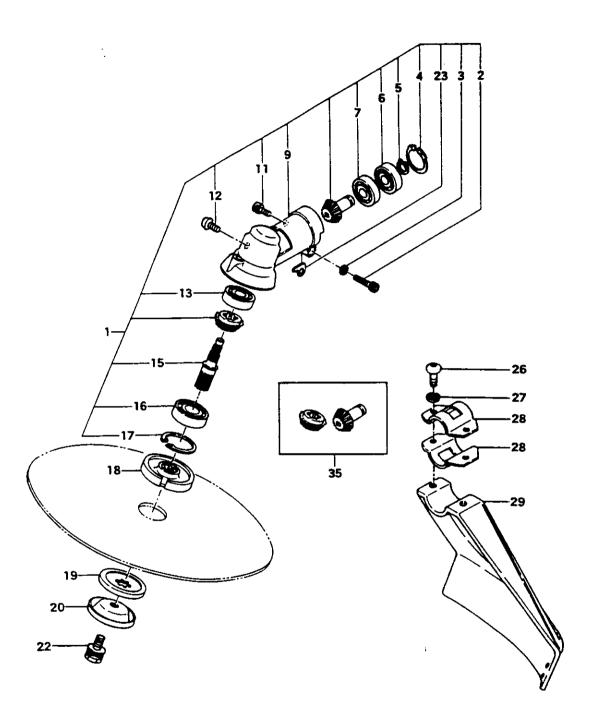

	150 22000 I AITO EISTING										
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS				
1	300-37307-91	CASE,GEAR ASS'Y	1		C						
2	990-51050-253	BOLT,HEX,5X25	1		В						
3	992-10050-062	WASHER,S,5	1		D						
4	993-53022-002	RING,STOP,R22 IN	1		C						
5	993-50010-002	RING,STOP,C-10 EX	1		C						
6	999-61690-001	BEARING,BALL,#6900ZZ	1		В	i					
7	999-61690-000	BEARING,BALL,#6900	1		В						
9	300-37307-20	CASE,GEAR	1		D ₁						
11	990-51050-103	BOLT,HEX.HOLE,5X10	1		C						
12	990-14080-104	SCREW,8X10	1		Α						
13	999-61626-000	BEARING,BALL,#626	1		В						
15	304-37307-200	SHAFT,GEAR	1		С						
16	999-61600-104	BEARING,BALL,#6001DD	1		В						
17	993-51028-002	RING,STOP,IN,C-28	1		C						
18	310-37623-202	HOLDER, CUTTER	1		В						
19	311-37300-20	CAP,CUTTER HOLDER	1		Α						
20	316-33410-200	PROTECTOR,BOLT	1		Α						
22	312-37623-200	BOLT, FIXING, W/WASHERS	1		Α		;				
23	324-37350-20	WASHER,GEAR CASE	1		ם	:					
26	990-53060-153	BOLT,HEX,6X15	2		в						
27	992-10060-062	WASHER,S,6	2		Α		į				
28	442-33905-201	BRACKET,SAFETY GUARD	2		В						
	į.	GUARD,SAFETY	1		Α						
35	301-37300-01	SET,GEAR/PINION	1		Α						
	1		i 1				İ				

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.8 TOOLS & NYLON HEAD

